


BADU Eco Flex

Parameter list for RS 485

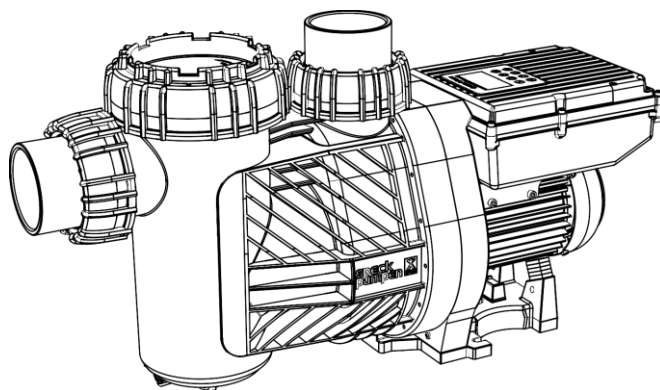

Modbus RTU

Parameter No.	Name	Attr.	Min.	Max.	Unit	Description
40001	Start / Stop	RW	0	1		This register is edge controlled 0 --> 1 start 1 --> 0 stop
40004	Actual Speed Filtered	RO			rpm	Real speed
40005	Target Speed	RW	600	3400	rpm	Set target speed
40016	Real Power Mains	RO			W	Power consumption
40061	Reference Power Percent	RW	5	100	%	Set target power
40063	Motion Control Mode	RW	0	1		Motion control mode. 0 -----> speed mode. 1 -----> power mode.
50501	ErrorCode <200	RO	0	65535		Current error code <200
50507	ErrorCode >200	RO	0	65535		Current error code >200

RW – read write

RO – read only

Holding-Register (Register number > 40000), Data format 16Bit

Modbus Communication Settings	
Baud Rate	19200
Data Bits	8
Parity	none
Stop Bits	1
Device- /Slave-ID	1